

# perma FLEX - Quick Start Guide

## 1. Predefine installation / Select lubricant, discharge period + connecting parts

**Examples: Bearing lubrication**

**Direct mounting**

- Support flange FLEX
- Reducer

**Remote mounting → for lube-points with vibration, limited mounting space, high temperature**

- Mounting bracket 1-point G1/4 female [109685]
- Reducer
- Hose connector G1/4 male for hose iØ 9.5 mm - push-lock [116624]
- Heavy Duty hose up to +100 °C øØ 16 mm x iØ 9.5 mm [101555]
- Hose connector G1/4 male for hose iØ 9.5 mm - push-lock [116624]

**Select a suitable lubricant for perma FLEX**  
→ e. g. perma MULTI LC 150-2 (SF01)

**Select discharge period**  
→ e. g. with perma SELECT Software

(refer to our product catalog for details)

## 2. Prepare lube-point

**Clean lube-point**

**Remove grease fitting**

**Add sealant**  
(e. g. Loctite® 243™)

**Add reducer, support flange and tubes (if required)**

**For direct mounting:**  
Prefill lube-point and any connecting parts  
(use the same grease that is contained in the lubrication system)

**For remote mounting:**  
Prefill lube-point and any grease lines / connections  
(use the same grease that is contained in the lubrication system)

**Pressure check: Lube-point / all connecting parts**  
(refer to perma FLEX installation guide for details)

## 3. Activation / Installation of lubrication system

**Turn switch to set discharge period**

**Note activation / exchange date on label**

**Remove plug**